Nintendo®

AUTHORIZED REPAIR CENTERS℠

Component Quick Reference List

NES Components			
Control Deck (original)	201	Controller (new design)	28165
Control Deck (new design)	28812	A/V Cables	21640
AC Adapter	22106	300/75 Ohm Converter	21638
RF Switch	22107	75/300 Ohm Converter	21639



Game Boy Components			
Game Boy (original)	18404	Game Boy (Green)	31609
Stereo Headphones	21642	Game Boy Pocket (Silver)	36124
Game Link Cable	26915	Game Boy Pocket (Black)	36120
Game Boy (Black)	31584	Game Boy Pocket (Clear)	36121
Game Boy (Clear)	31594	Game Boy Pocket (Yellow)	36125
Game Boy (Yellow)	31599	Game Boy Pocket (Red)	36123
Game Boy (Red)	31604	Game Boy Pocket (Green)	36122

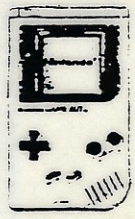

Super NES Components			
Control Deck (original)	22945	Standard Controller	22682
Control Deck (GPM)	26886	Stereo A/V Cable	21714
AC Adapter	22817	S-VHS Cable	22425
RF Switch	22107		

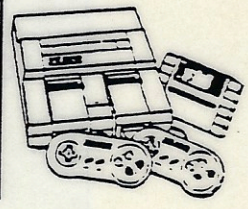

Nintendo 64 Components		N64 Controller (Gray)	35545
Control Deck	34299	N64 Controller (Yellow)	35716
AC Adapter	34390	N64 Controller (Black)	35717
RF Switch	22107	N64 Controller (Green)	35718
RF Modulator	34271	N64 Controller (Blue)	35719
Stereo A/V Cable	21714	N64 Controller (Red)	35720

Nintendo®

IMPORTANT SERVICE PHONE NUMBERS

Warranty Verification	(800) 255-3788
Administrative Support	(800) 447-8373
Parts Orders (Fax)	(800) 447-8362
Parts Orders (Phone)	(800) 531-4048
Consumer Service Hotline	(800) 255-3700
Power Line: Top 20 Game Tips	(425) 885-7529
Game Play Counseling ($1.50/minute, under 18 must have parental permission)	(900) 288-0707